


How to measure curtains on a flat window

If you have an existing pole or track

1. Measure the width


Measure the width of the pole or track between the finials or end caps.

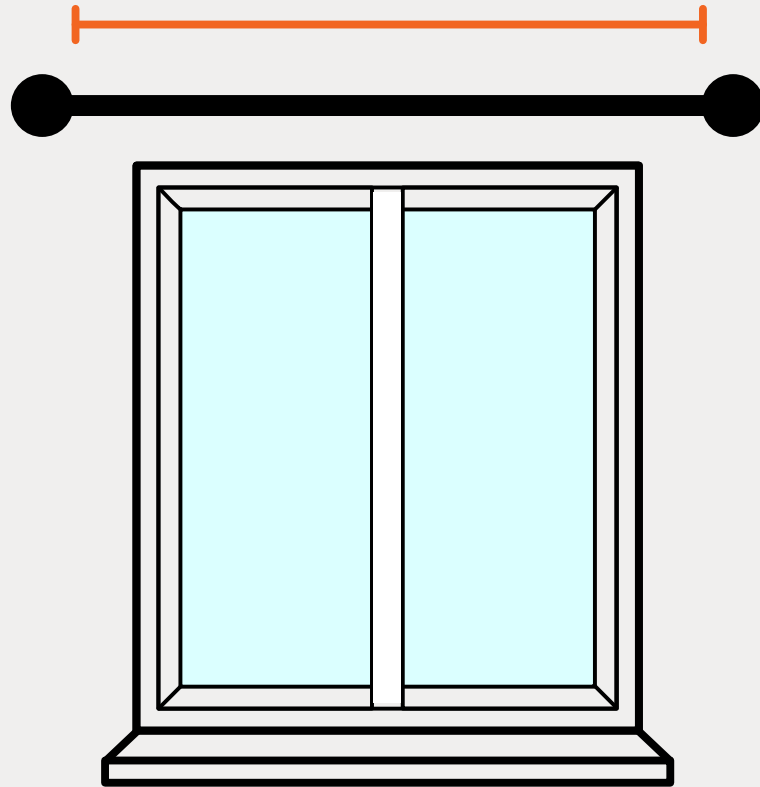


2. Measure the drop

Measure from the bottom of the pole or track to where you want your curtains to finish. For eyelet headed curtains, measure from the top of the pole. There are three usual drops - floor, below sill, on sill.

Eyelet curtains, with pole

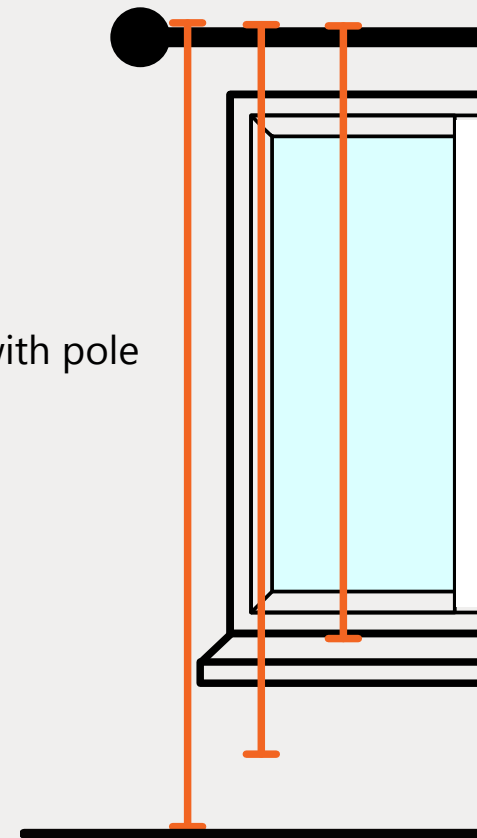

Pinch / pencil pleat curtains, on a track

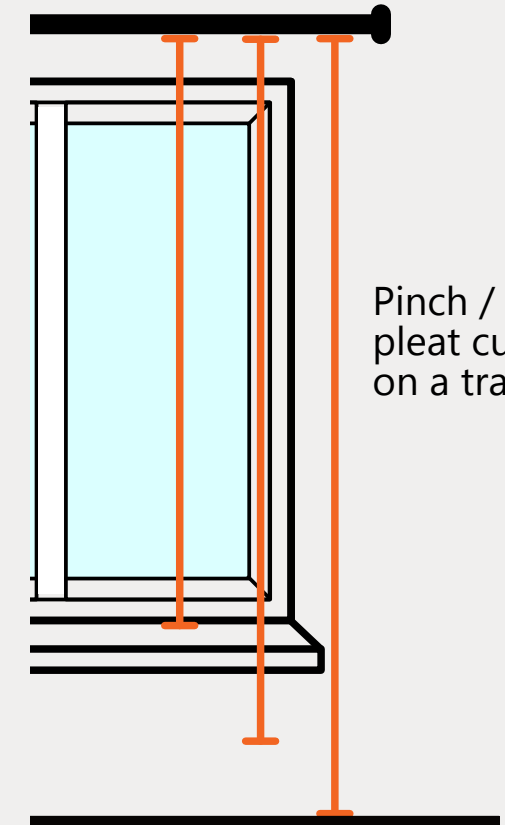


How to measure curtains on a flat window

If you have no pole or track installed yet

1. Measure the width

Measure the width of the recess (your window frame).
Add 15cm to either side to get your total measurement.

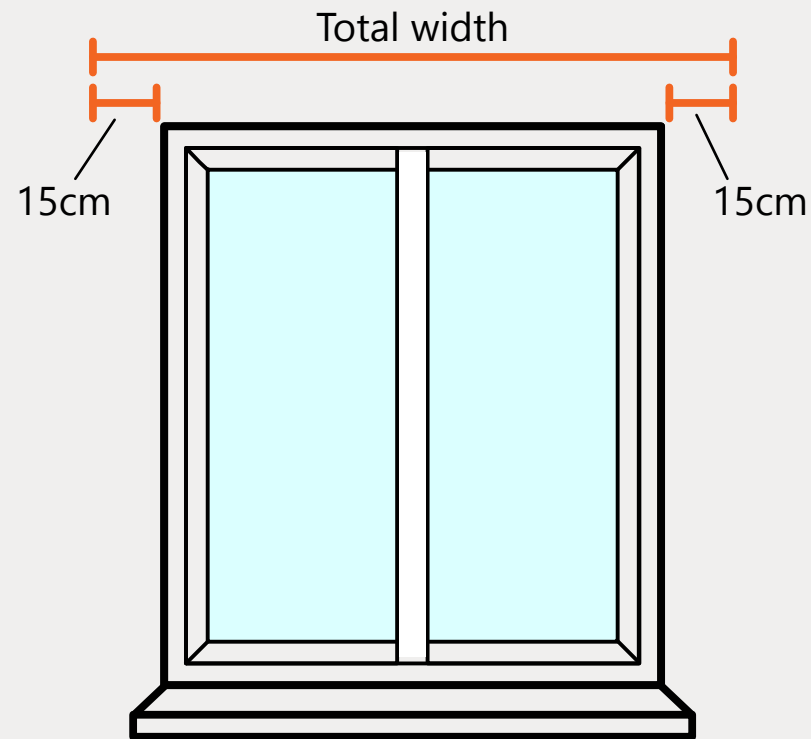

2. Measure the drop

Measure from where you would like your pole or track to be, to where you want your curtains to finish.

Usually, the pole or track will be 15cm above the window.

If the distance between the top of the window and the ceiling is less than 30 cm, measure this height, and divide by two to position the pole or track in the centre of this space.

